

A.I. Cage Adaptor Kit


**Hardware Kit
62900392**

For questions about this product, or for parts inquiries, please contact our Customer Service Center listed below.

1. After receiving the A.I. Cage (62178422), safely remove the Hardware Package (62900392) along with the A.I. Cage Adapters (62401572).



2. Position the A.I. Cage in front of the Crowd Alley Reversible Leg & Handle Kit (64160542) so that the hookups on the side opposite of the handles align with those of the A.I. Cage. The A.I. Cage does not connect to the adjustable leg. Make sure that the pins are unhooked on the A.I. Cage and that they are hanging loose.

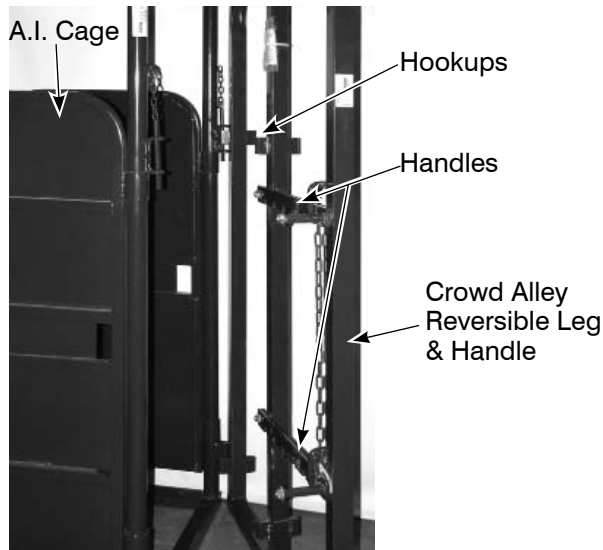

3. Carefully maneuver the A.I. Cage onto the bottom hookups as shown.



4. Next, position the A.I. Cage (62178422) until the top hookups align and then insert the pin as shown.



**Behlen[®]
COUNTRY**

CUSTOMER SERVICE CENTER

PO Box 569
Columbus, NE
68602-0569

Ph: 800-447-2751
Fax: (402) 563-7447
www.behlencountry.com

5. With the Crowd Alley Reversible Leg & Handle Kit in the narrowest alley position, insert one (1) A.I. Cage Adaptor (62401572) on the bottom Crowd Alley Frame on the same side as the adjustment handles.



6. Next, slide the adaptor upwards and against the Crowd Alley Frame until the bottom of the A.I. Cage pin is connected into the hookup. Place one (1) hex bolt (3188031) with one (1) washer (3948003) in each side through A.I. Cage Adaptor slots and securely fasten using one (1) hex nut (2688008).



7. Using the same approach, position the second A.I. Cage Adaptor for the top pin and secure using one (1) hex bolt (3188031) with one (1) washer (3948003) on each side and one (1) hex nut (2688008). Check to ensure that every piece is now secure and in working order.

